If you are using a printed copy of this procedure, and not the on-screen version, then you <u>MUST</u> make sure the dates at the bottom of the printed copy and the on-screen version match.

The on-screen version of the Collider-Accelerator Department Procedure is the Official Version.

Hard copies of all signed, official, C-A Operating Procedures are kept on file in the C-A ESHQ

Training Office, Bldg. 911A.

C-A OPERATIONS PROCEDURES MANUAL

	7.1.11	25 kW	Helium	Refrigerator	Cooldown
--	--------	-------	--------	--------------	----------

Text Pages 2 through 9

Hand Processed Changes

HPC No.	<u>Date</u>	Page Nos.	<u>Initials</u>	
	Approved:	Signature on File		
	Co	llider-Accelerator Departmen	t Chairman D	ate

S. Sakry

7.1.11 25 kW Helium Refrigerator Cooldown

1. Purpose

This procedure provides instructions for the cooldown of the RHIC 25 kW Helium Refrigerator in two phases from room temperature (~300°K) to 4°K. Phase 1 involves cooling the warm end of the refrigerator down to a temperature of 60°K. Phase 2 involves bringing the temperature down to 4°K and setting the refrigerator cold end on the calorimeter.

2. Responsibilities

- 2.1 The Shift Supervisor, or an Operator designated by the Shift Supervisor, is responsible for conducting the procedure and providing documentation in the Cryogenic Control Room Log and in the Cryogenic Valve Log.
- 2.2 Should a problem arise during the completion of this procedure, the Shift Supervisor shall contact the Technical Supervisor for instructions before continuing.

3. <u>Prerequisites</u>

- 3.1 The performance of the refrigerator relies heavily on the system being free of contaminants. Prior to cooldown, the cryogenic system shall be pumped, purged, and scrubbed. For instructions on scrubbing the refrigerator, please reference <u>C-A OPM 7.1.13</u>. The main compressor system shall be lined up and ready for operation.
- 3.2 The Operator shall be trained by the Shift Supervisor.
- 3.3 Operator shall be familiar with the following drawings:

```
Drawing 3A995069 25 KW Helium Refrigerator P & ID

Drawing 3A995066 6:00 Yellow Ring P & ID (used with C-A-OPM-ATT

7.1.11.a)

Drawing 3A995086 6:00 Blue Ring P & ID (used with C-A-OPM-ATT

7.1.11.a)
```

Refrigerator Valve Reference Guide

- 3.4 Operator shall be familiar with the physical location of components on the drawings listed under 3.3.
- 3.5 Operator shall be familiar with the control pages found on the CRISP control system.

4. Precautions

- 4.1 Confirm the availability of Particle Accelerator Safety System (PASS) in the refrigeration wing of 1005R.
- 4.2 All personnel entering the refrigeration wing of 1005R must have a personal ODH monitor and carry an emergency escape pack, if the refrigerator is operating.
- 4.3 This procedure assumes that cooldown of the refrigerator will use HX1A/2A, adsorber bed A, and all "A" string turbines. If HX1B/2B, adsorber bed B, or "B" string turbines are used, valve selection must be adjusted accordingly.

5. Procedure

5.1	Align compressor building valves.	
5.2	Align the hygrometer and oxygen monitor in consample compressor discharge.	npressor building to
5.3	Verify valve positions as specified in <u>C-A-OPM-</u>	ATT 7.1.11.a.
5.4	Phase 1	
	5.4.1 Set the following process valves to position:	o the CLOSED
	H9A H33A H86A H100A	H328A H352A H385A H402A

	5.4.2	Set the following proposition:	cess valves to the OPEN
		position.	
		H38A	H156M
		H90M	H410M
		H123A	H398M*
		H130M	H798M*
		H131A	H406M*
*The indicated posit	ion of these valu	nes must be manually u	apdated on CRISP page D51.
	5.4.3	Start main compresso	ors as needed.
	5.4.4		e inlet filter and purge per C-A- of Warm Expander Inlet Filter".
	5.4.5		urbines 1A, 2A, 3A, and 4A per Varm Turbines "A" Train
atm.	5.4.6	Ensure warm turbine	mid pressure is less than 7
	5.4.7	Set turbine vanes as f	follows:
	Н3	30A - Closed	
		39A - 15% Open	
		54A-25% Open	
		57A - 25% Open	
	5.4.8	Place turbine outlet v a setpoint of 1.40 atm	valve H380A in automatic with n.
	5.4.9	Start warm turbines.	
	5.4.10	less than or equal to 1 through the cooldown	let temperature at TI361H is 150° K, control helium flow n return line so as to maintain a H9A outlet) between 2 - 3 tling valve H9A.

5.4.11 In manual mode, put valve H153A at 100% ope	n
and open valve H344A 100%.	

Caution:

Throughout this procedure, monitor temperature sensor TI3063 on the low pressure return to the compressors. Should TI3063 drop below 270°K, quickly evaluate the bypass configuration.

5.4.12	Monitor the temperature of the cooldown return flow at TI8H (H9A inlet). When TI8H reads below 150°K open valve H425M.
 5.4.13	Close valve H827M.
5.4.14	Monitor the temperature of the cooldown return flow at TI8H (H9A inlet). When TI8H reads ~ 120°K, close valve H156M and slowly open valve H376M.
 5.4.15	Close valve H425M.
 5.4.16	When the outlet temperature of the on-line adsorber is below 90°K, enable the adsorber logic alarm.
5.4.17	Monitor the temperature of the cooldown return flow at TI8H (H9A inlet). When TI8H reads ~ 60°K and the adsorber outlet temperature is less than or equal to 80°K, you are ready to go to Phase 2.
5.4.18	Set H3025A (recovery pump back) in automatic at 1.18 atmospheres. Set the emergency tank fill valve H2918A in automatic control.
5 4 19	Set valves H153A and H344A in automatic mode

 5.5.1	Set the following valves to the CLOSE	D position:
	H9A H130M H131A	H376M H413M H813M
 5.5.2	Open valve H827M.	
 5.5.3	Control helium flow through the coold- line so as to maintain a return pressure (inlet of intermediate pot) of 7 to 12 at by adjusting valve H86A. Maintain tur- adsorber bed at their normal temperature	at PT129H mospheres rbine #4 and
 5.5.4	Select a cold turbine inlet filter and pur OPM 7.1.51, "Purge of Cold Expander	
 5.5.5	Initialize cold turbines 5A and 6A per 97.1.42, "Cold Turbines "A" Train Initial	
 5.5.6	Monitor the temperatures of HX5/6. Woutlet temperatures of heat exchanger 5 150°K as read on temperature sensor T continue.	5/6 reaches
 5.5.7	Align path to return by closing valve H opening valve H409M.	410M and
 5.5.8	Start turbines 5A/6A and monitor tempsensor TI 408H (#6 outlet temperature)	
 5.5.9	Verify control circuit has placed valve (HX7) in Auto Control. Auto Control valve H406M being open and turbine t	is enabled by
 5.5.10	When temperature sensor TI408 (#6 outemperature) is less than TI31H (HX7M outlet), crack open valve H410M. (What for the temperature to drop, go to step	M H.P. nile waiting

Revision 2

	back to steps 9 and 10 TI31H).	when TI408H is	less than
 5.5.11	Slowly continue to op close valve H409M. The valve H410M is fully completely closed.	This step is compl	ete when
 5.5.12	Open the following va	lves:	
	H33A H58A		H130M
 5.5.13	Close valve H38A.		
 5.5.14	Set valve H95A in aut	omatic at 2.5 AT	M.
5.5.15	In manual, open valve less than or equal to 2 the pots.		
 5.5.16	Set the following valv	es to the OPEN p	osition:
	H5M H26A H238M	H123A H4643A	
 5.5.17	In manual mode, set v	alve H54A to 50%	6.
5.5.18	Monitor temperature s (TT228H is located be H130M, and TI233H in H40A and H69A.) We reach 180°K, open valuable will take some time du	efore valves H123 is located between then TT228H and we H425M slowly	A and n valves TI233H y. This step
 5.5.19	Close valve H827M.		
 5.5.20	Continue to monitor to and TI233H. When T 50°K open valve H15°	I228H and TI233	
5 5 21	Close valve H425M		

· · · · · · · · · · · · · · · · · · ·	When TI228H and TI233H are less than TI408H, open valve H409M and close valve H157M.
5.5.23	Open valve H437A and start cold vacuum pump #1. Set bypass valve H40A in automatic mode.
5.5.24	Set valves H54A and H58A in automatic mode.
5.5.25	Close valve H131A.
	Monitor temperature sensors TI45H (outlet of cold vacuum pumps) and TI228H (return line before valves H123A and H130M).
5.5.27	Close valve H26A.
	In manual mode, set valve H86A to flow 200 g/sec as read on flow element FE35H.
· · · · · · · · · · · · · · · · · · ·	Adjust valve H100A to raise the helium pot pressure to less than or equal to 2 atmospheres.
	Monitor temperature sensors TI45H (outlet of cold vacuum pumps) and TI228H (return line before valves H123A and H130M). When TI45H and TI228H average 5.5°K or less, open valve H38A. NOTE: Watch temperature sensor TI219H (on the return side of HX8/18/9) closely. If TI219H approaches 12°K close valve H38A, wait 5 minutes and reopen valve H38A. Repeat this cycle until opening valve H38A is successful.
5.5.31	Close valves:
	H409M H123A
	Place hi, intermediate and low pot level control valves (H100A, H106A and H114A) in automatic control at 75%. Control rate of pot fill by adjusting maximum open limit of valve H100A.
	Maintain flow on FE35H at 200 g/sec by adjusting valve H86A in manual mode.

_____ 5.5.34 When the intermediate and low pots holds 75 % liquid, apply heat to the calorimeter (CRISP page D41) so as to maintain balance. Adjust valve H86A and the calorimeter as needed.

6. <u>Documentation</u>

- 6.1 The check-off lines on the procedure are for place-keeping only. The procedure is not to be initialed or signed, it is not a record.
- 6.2 The Shift Supervisor shall document the completion of the procedure in the Cryogenics Control Room Log

7. References

- 7.1 Drawing 3A995009, 25°kW Helium Refrigerator P&ID.
- 7.2 Drawing 3A995066, 6:00 Yellow Ring P&ID.
- 7.3 Drawing 3A995086, 6:00 Blue Ring P&ID.
- 7.4 Refrigerator Valve Reference Guide.
- 7.5 <u>C-A-OPM 7.1.40, "Warm Turbines "A" Train Initialization".</u>
- 7.6 C-A-OPM 7.1.50, "Purge of Warm Expander Inlet Filter".
- 7.7 C-A-OPM 7.1.51, "Purge of Cold Expander Inlet Filter".
- 7.8 C-A-OPM 7.1.42, "Cold Turbines "A" Train Initialization".

9

8. Attachments

8.1 <u>C-A-OPM-ATT 7.1.11.a "Valve Position Tables"</u>.